

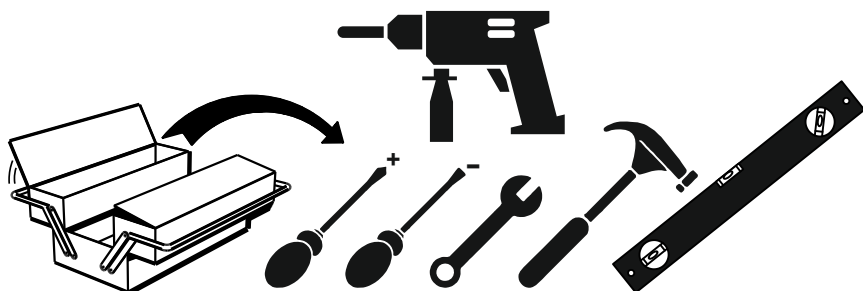
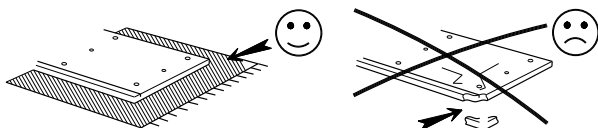


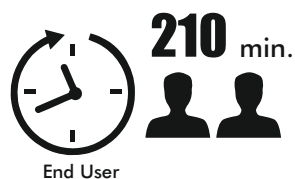


MULTIMO

228-ROYAL PLUS 190

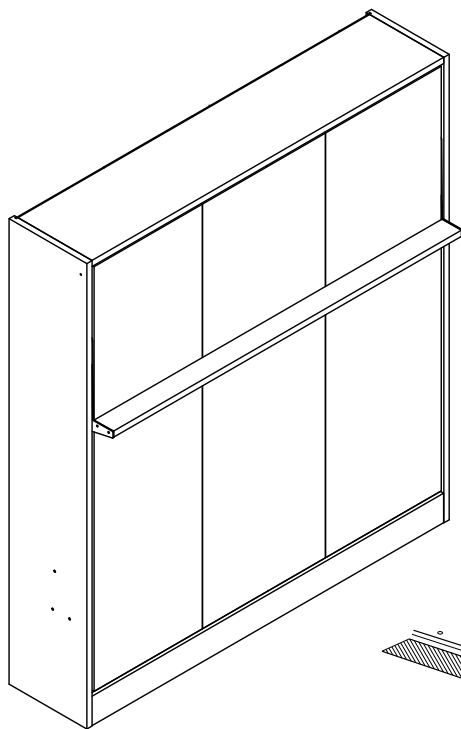

VIDEO
















link









Assembly Instructions

Track Title	Piece	(inch)			Piece	(mm)		
		Thickness	Length	Width		Thick	Height	Most
A-R / A-L	2	1,18	89,76	17,32	2	30	2280	440
B	1	0,71	78,35	16,54	1	18	1990	420
C	1	1,18	78,35	16,50	1	30	1990	419
D	1	0,71	78,35	11,81	1	18	1990	300
E	4	0,31	89,25	19,69	4	8	2267	500
F	1	0,71	78,35	5,67	1	18	1990	144
G-1	2	0,71	81,89	25,79	2	18	2080	655
G-2	1	0,71	81,89	25,79	1	18	2080	655
H	1	1,18	77,48	4,33	1	30	1968	110
K (OPTIONAL HEADBOARD)	2	1,97	37,87	78,15	2	50	962	1985


Accessories List

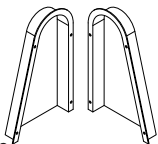MNX 02  24 / piece	MNG - 01  44 / piece	OT-054  2 / piece	CT - 01 (6x40) mm  2 / piece
MNX - 03  10 / piece	KVL 01  34 / piece	VDA - 01 (6,5x50) mm  4 / piece	VD - 02 (3,5x25) mm  40 / piece
PL - 02 (8x22x1) mm  3 / piece	TFC - 01(8x70) mm  3 / piece	DD - 01 (R10)  3 / piece	VTB - 01 (4,8x16) mm  12 / piece
IM - 01 (6x30) mm  4 / piece	DSE - 01 (40x90x32) mm  3 / piece	TAP - 01  44 / piece	TAP - 02  4 / piece
CT - 02 (6x30) mm  2 / piece	CTM - 02 (8x35) mm  2 / piece	YSB - 01 (3,9x16) mm  2 / piece	VTB - 02 (4,2x16) mm  88 / piece
SG - 01  2 / piece	OT-056D  2 / piece	AVT - 01  6 / piece	KMT-01  1 / piece

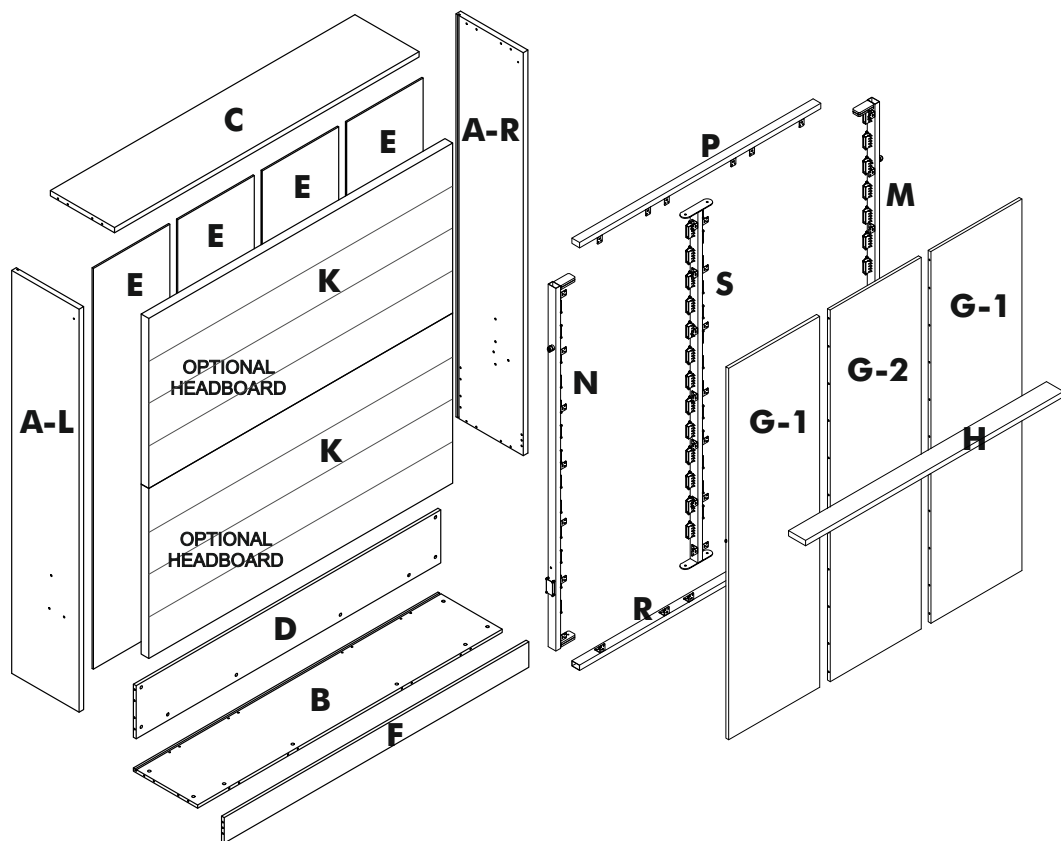


LTA - 01  26 / piece	KOR  1 / piece	KKS - 01  2 / piece	
CTA - 01 (8x15) mm  12 / piece	PL - 05 (8x16x2) mm  14 / piece	CTM - 05 (8x45) mm  2 / piece	OT-056PE  2 / piece
MKZ - 05/02  1 / piece	SC - 92  2 / piece	PRF  1 / piece	H 01  2 / piece


STEP 1




MNX - 02



KVL 01

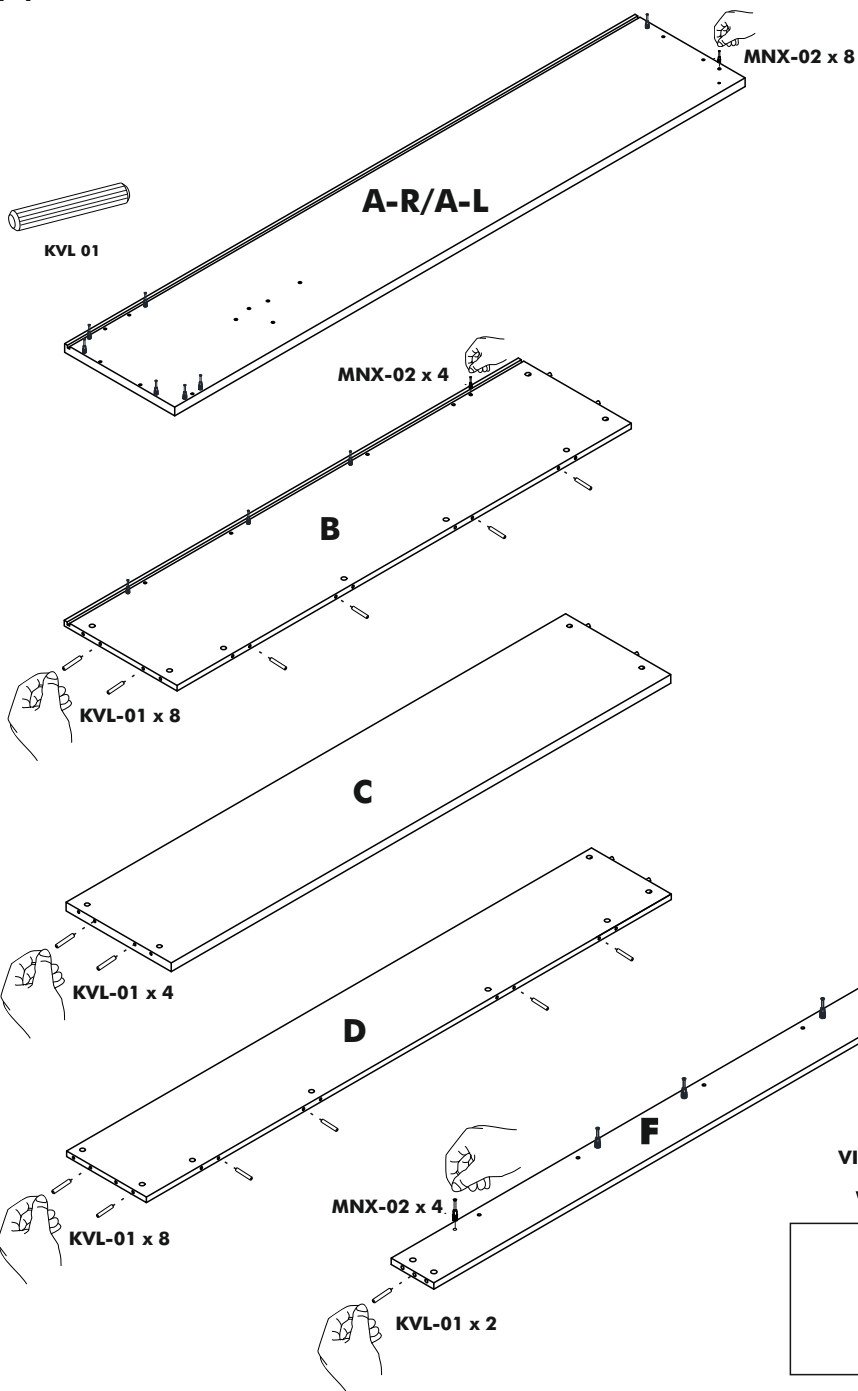


VIDEO

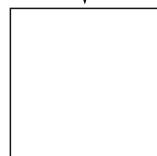


link

STEP 2

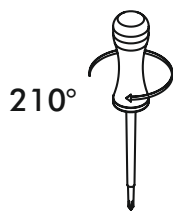

MNG - 01 x 8

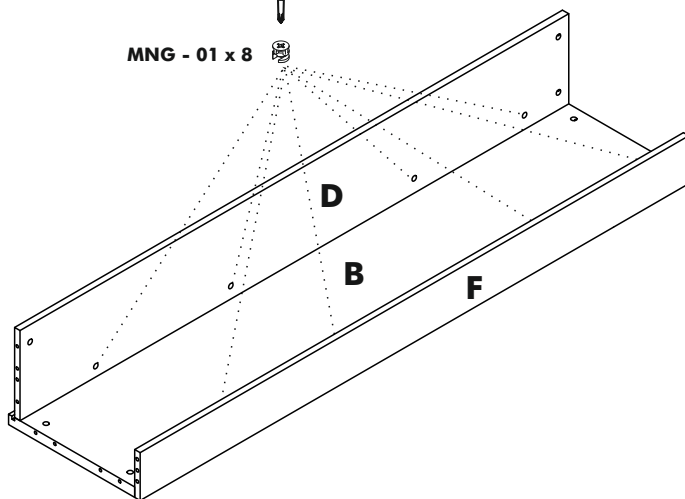


STEP 3




210°



MNG - 01 x 8

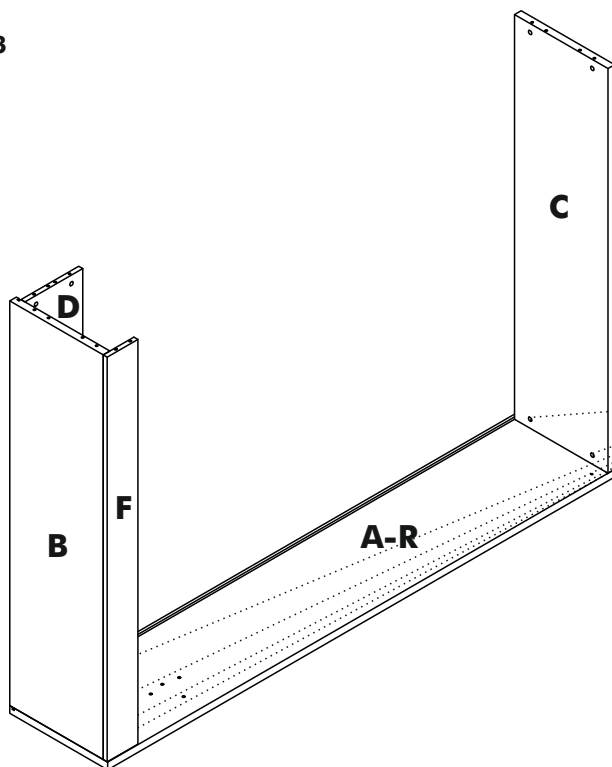


VIDEO

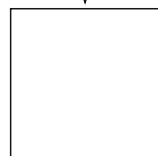


link


STEP 4

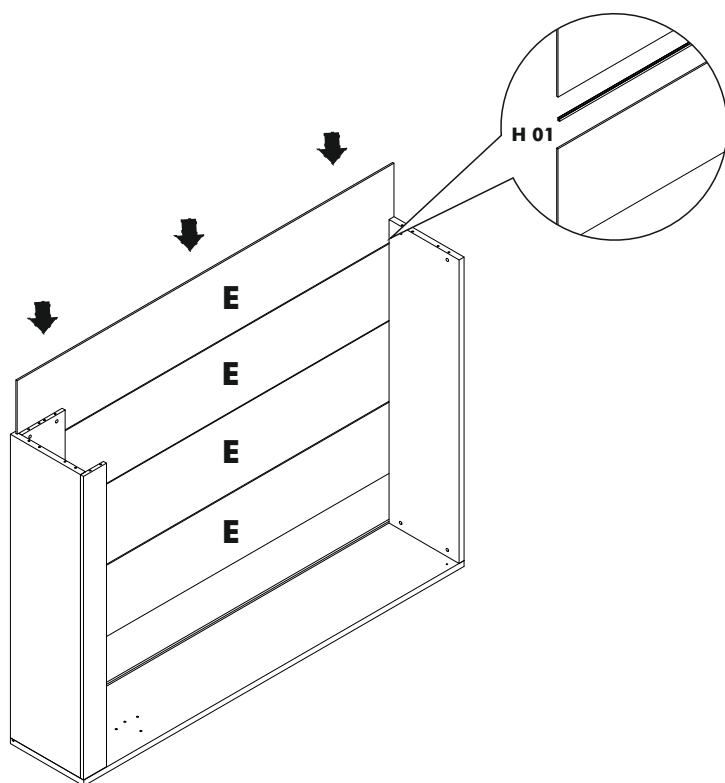

STEP 5

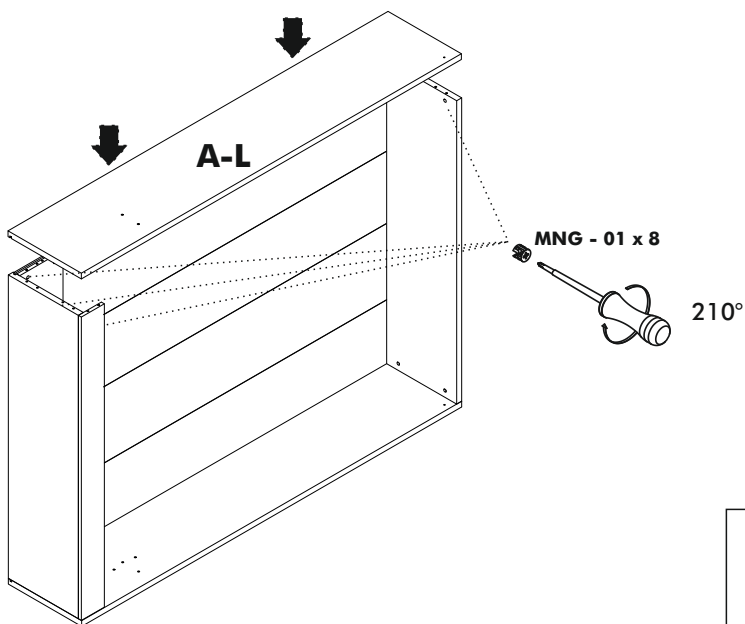


VIDEO

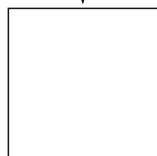


link

STEP 6

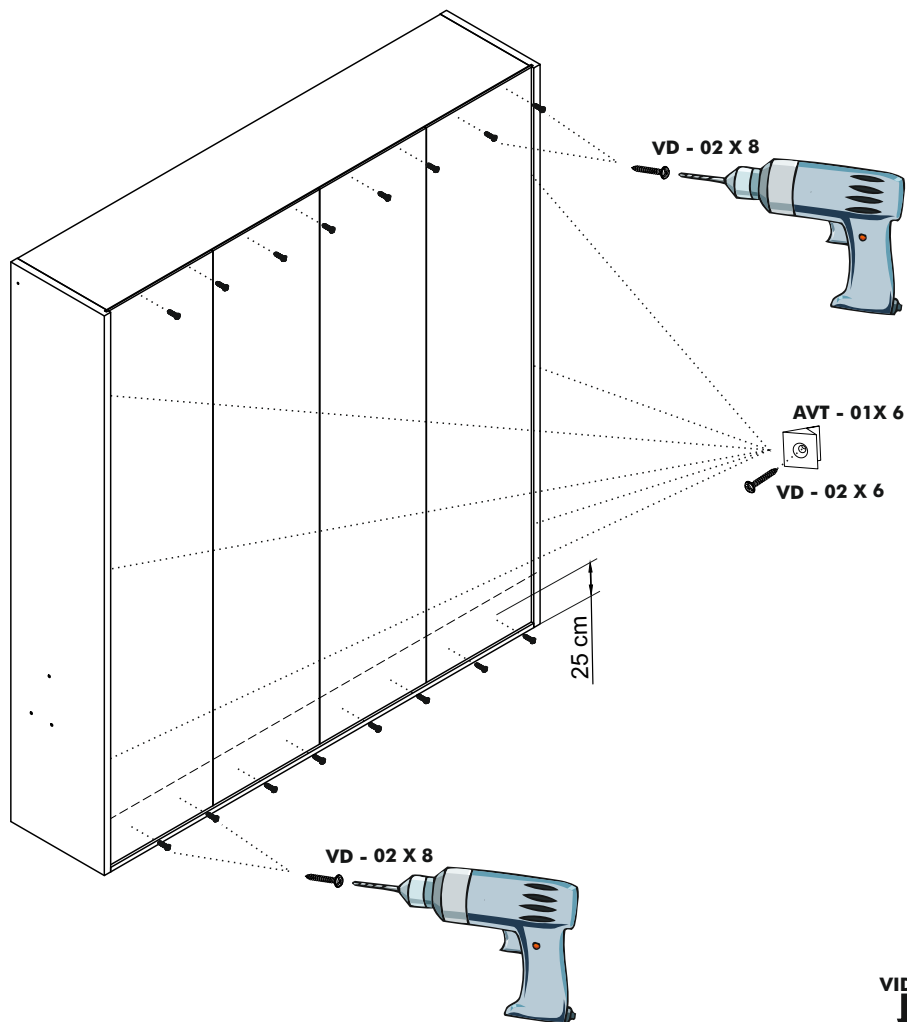



VIDEO



link

STEP 7

OPTIONAL HEADBOARD

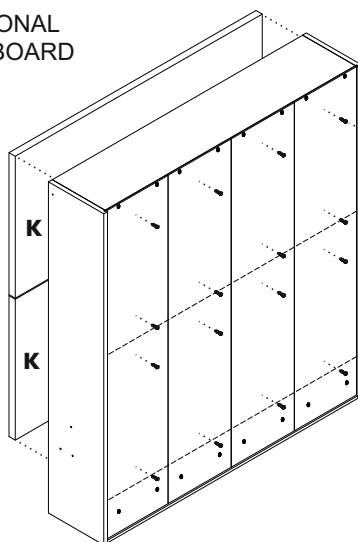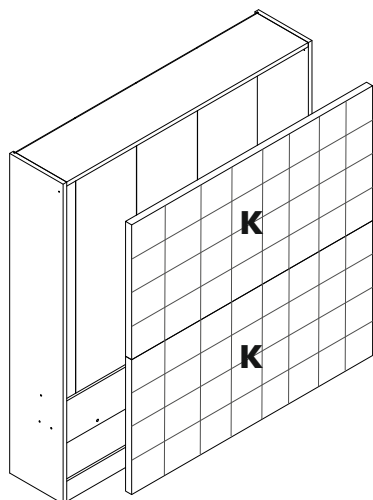

VD - 02x16



STEP 8

Ø 10 mm





DD - 01

TFC - 01

PL - 02


VTB - 01

DSE - 01

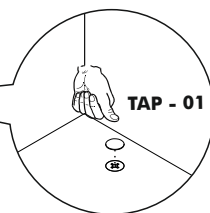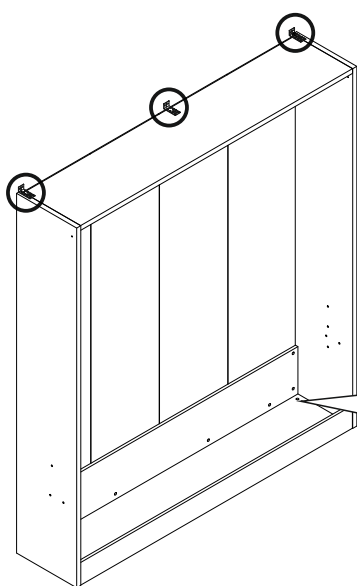

TAP - 01

VIDEO

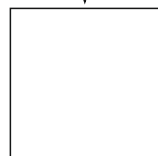


link

STEP 9



KVL 01



MNX - 03

MNX - 03 x 10



G-2

MNX - 02 x 12



210°




MNG - 01 x 20




STEP 10



MNG - 01

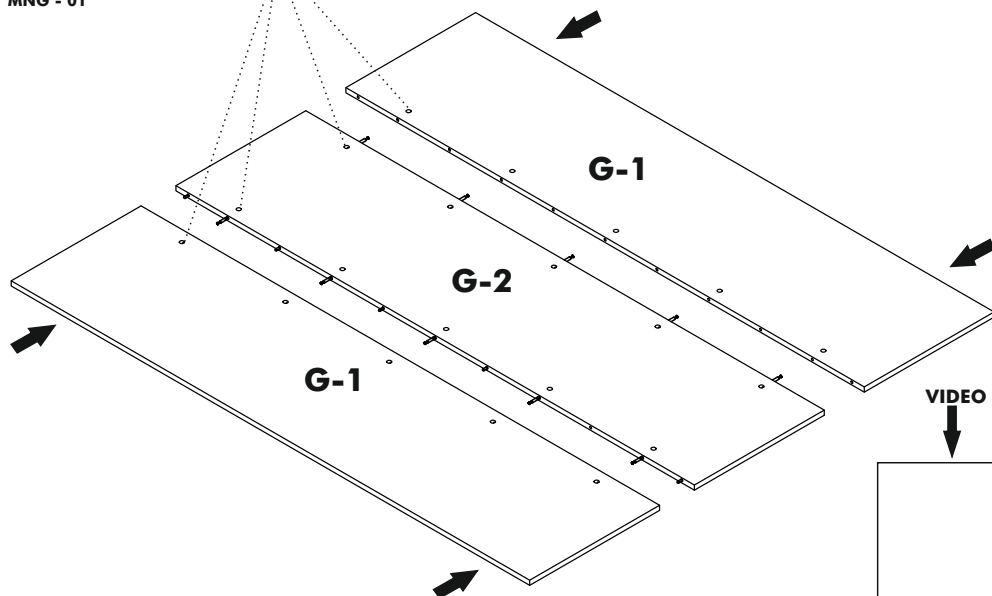


VIDEO

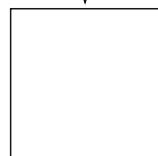


link


STEP 11

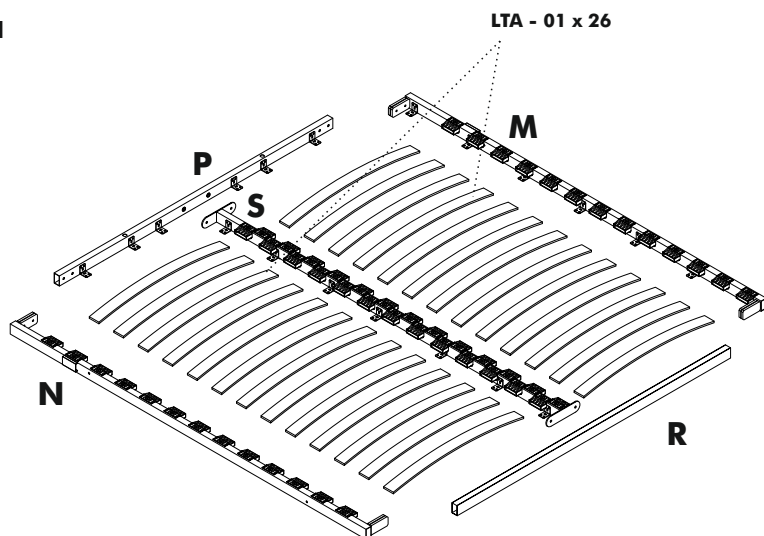


STEP 12

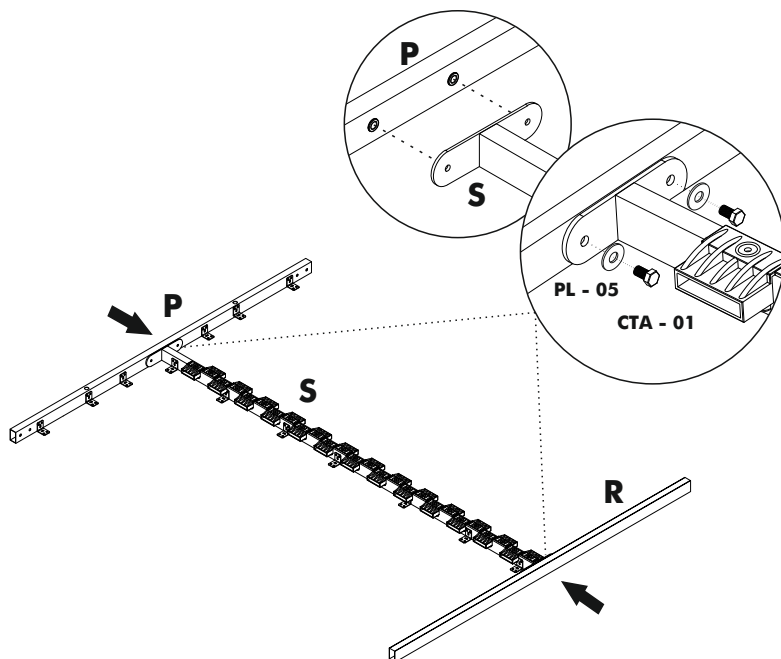


VIDEO

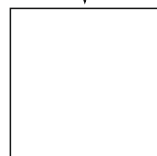

STEP 13

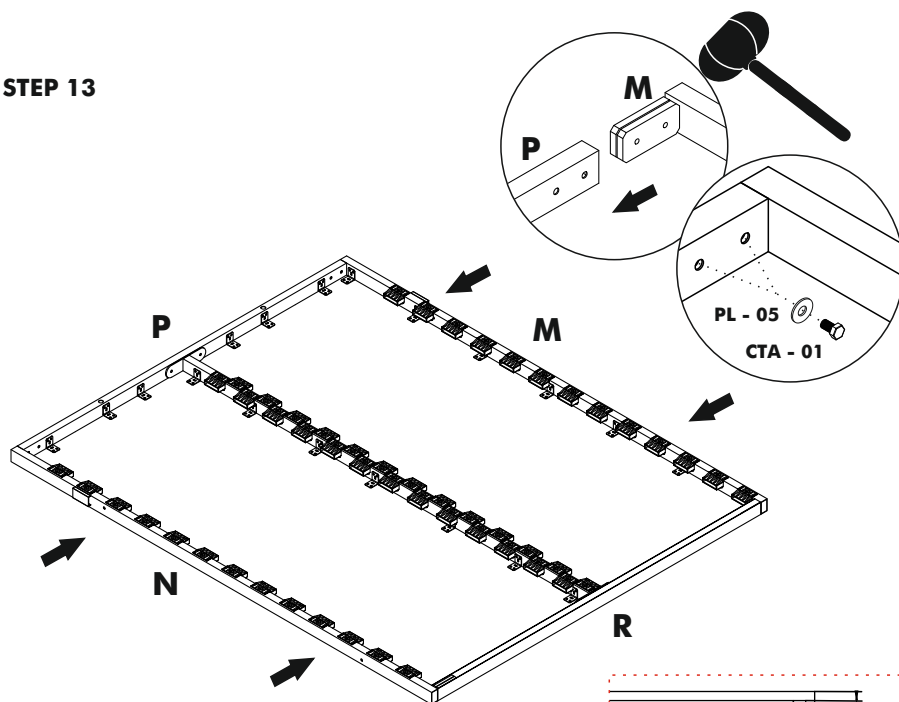


STEP 14

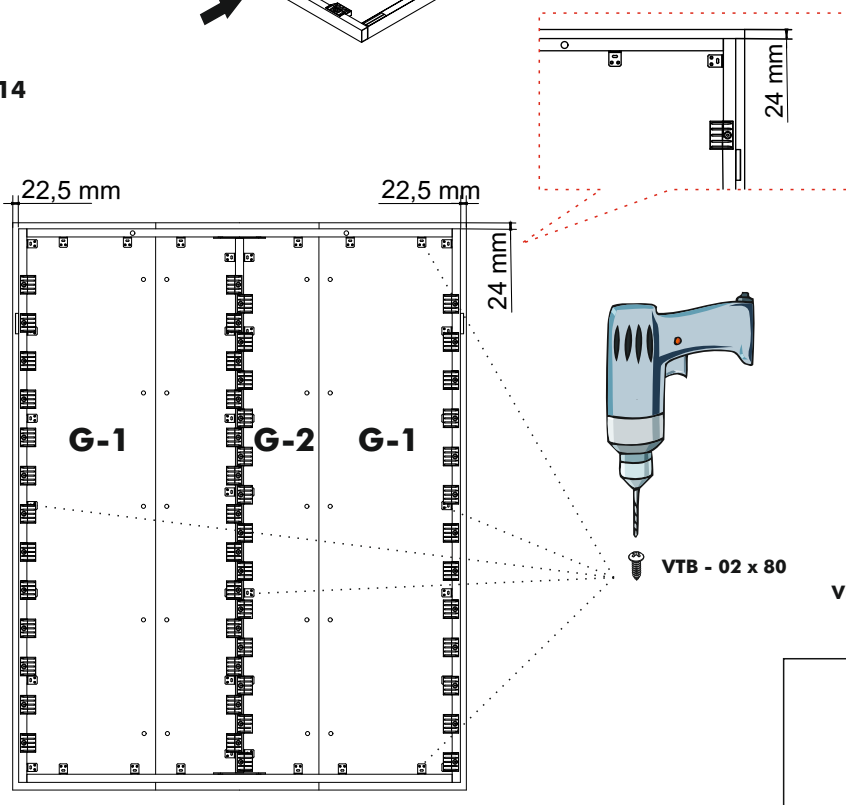


STEP 15


Unscrew the Screws

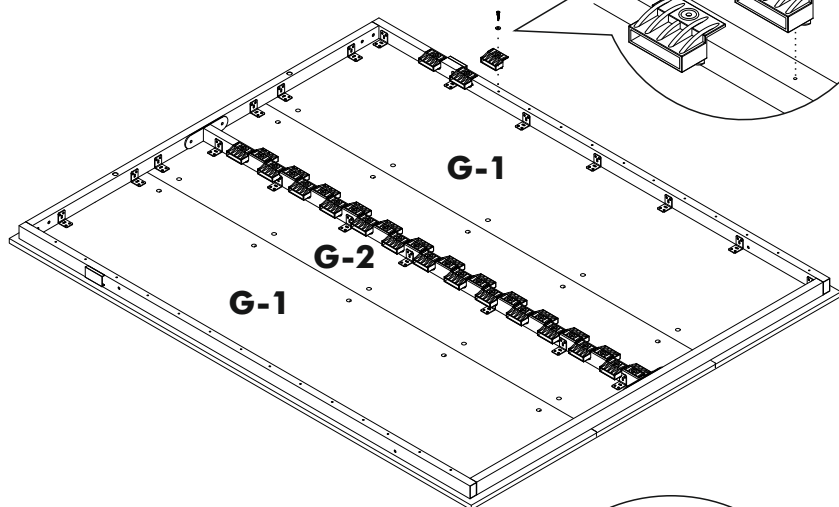

STEP 16

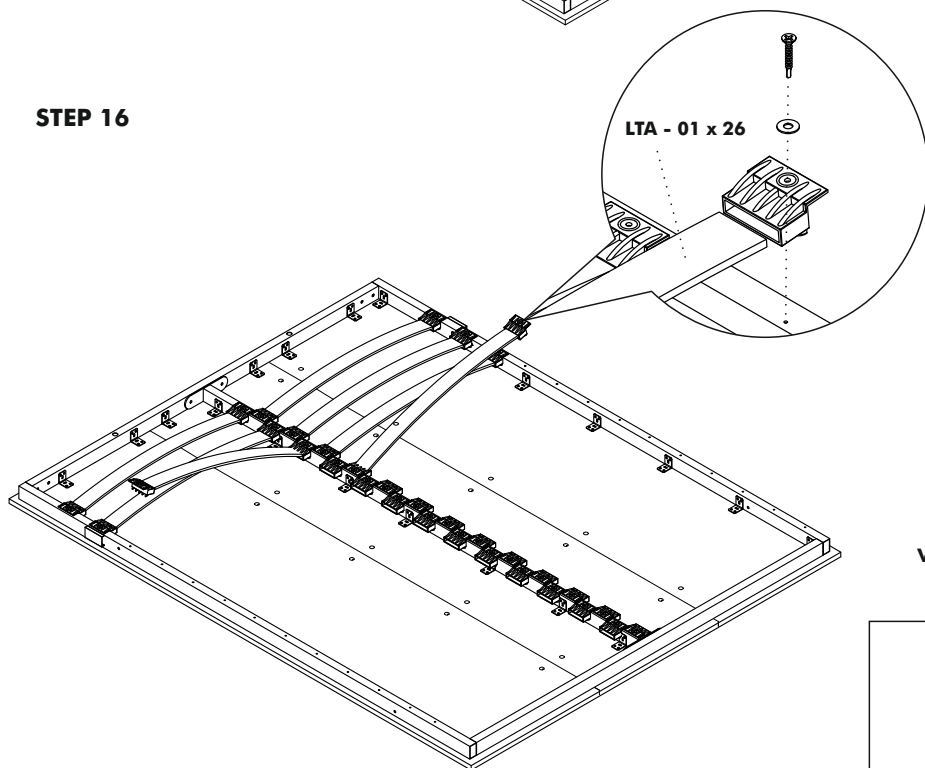


VIDEO

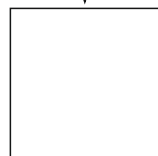


link



STEP 17

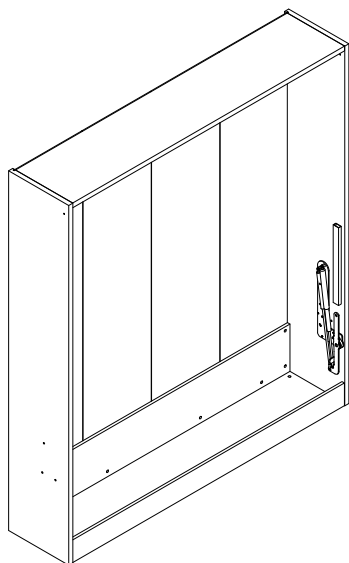


CAUTION
DO NOT UNLOCK BEFORE INSTALL

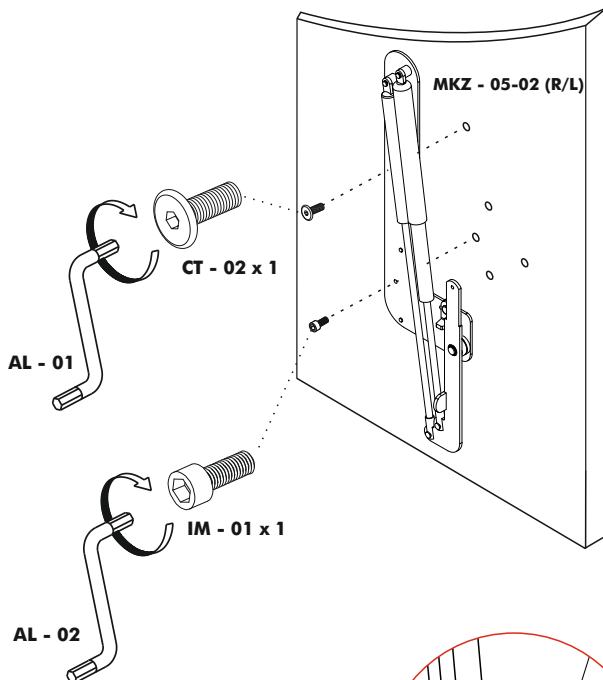

STEP 18

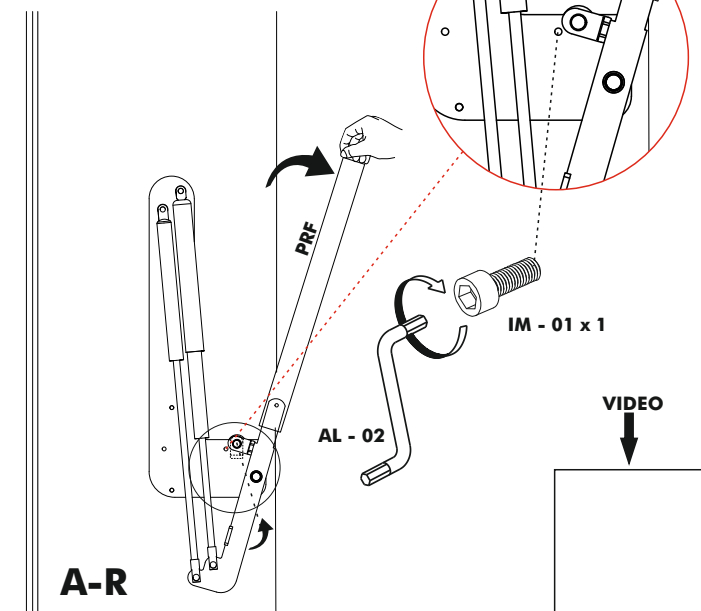
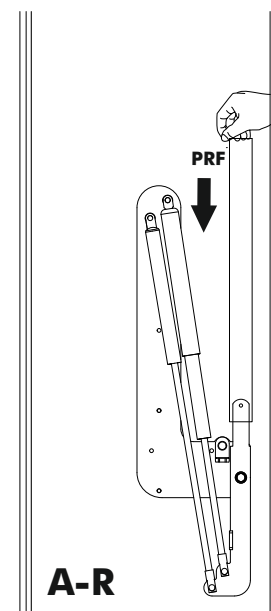


VIDEO

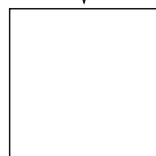


link

STEP 19

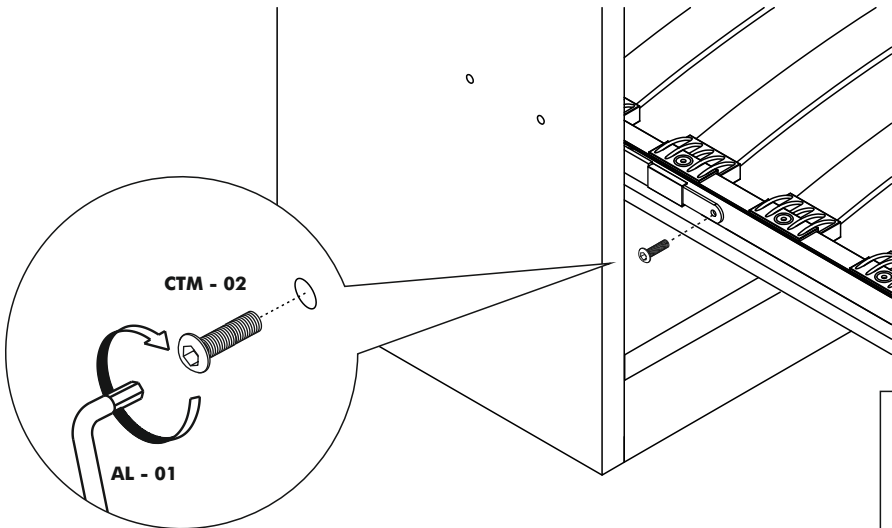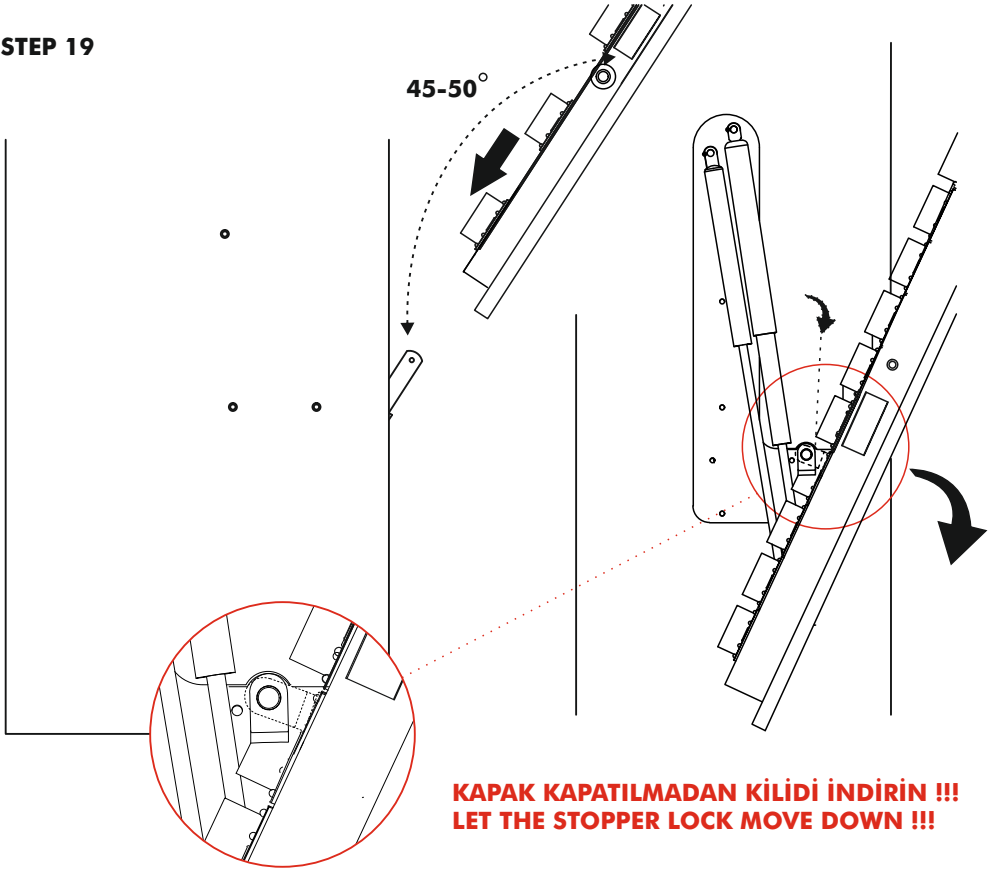


VIDEO




link


STEP 20

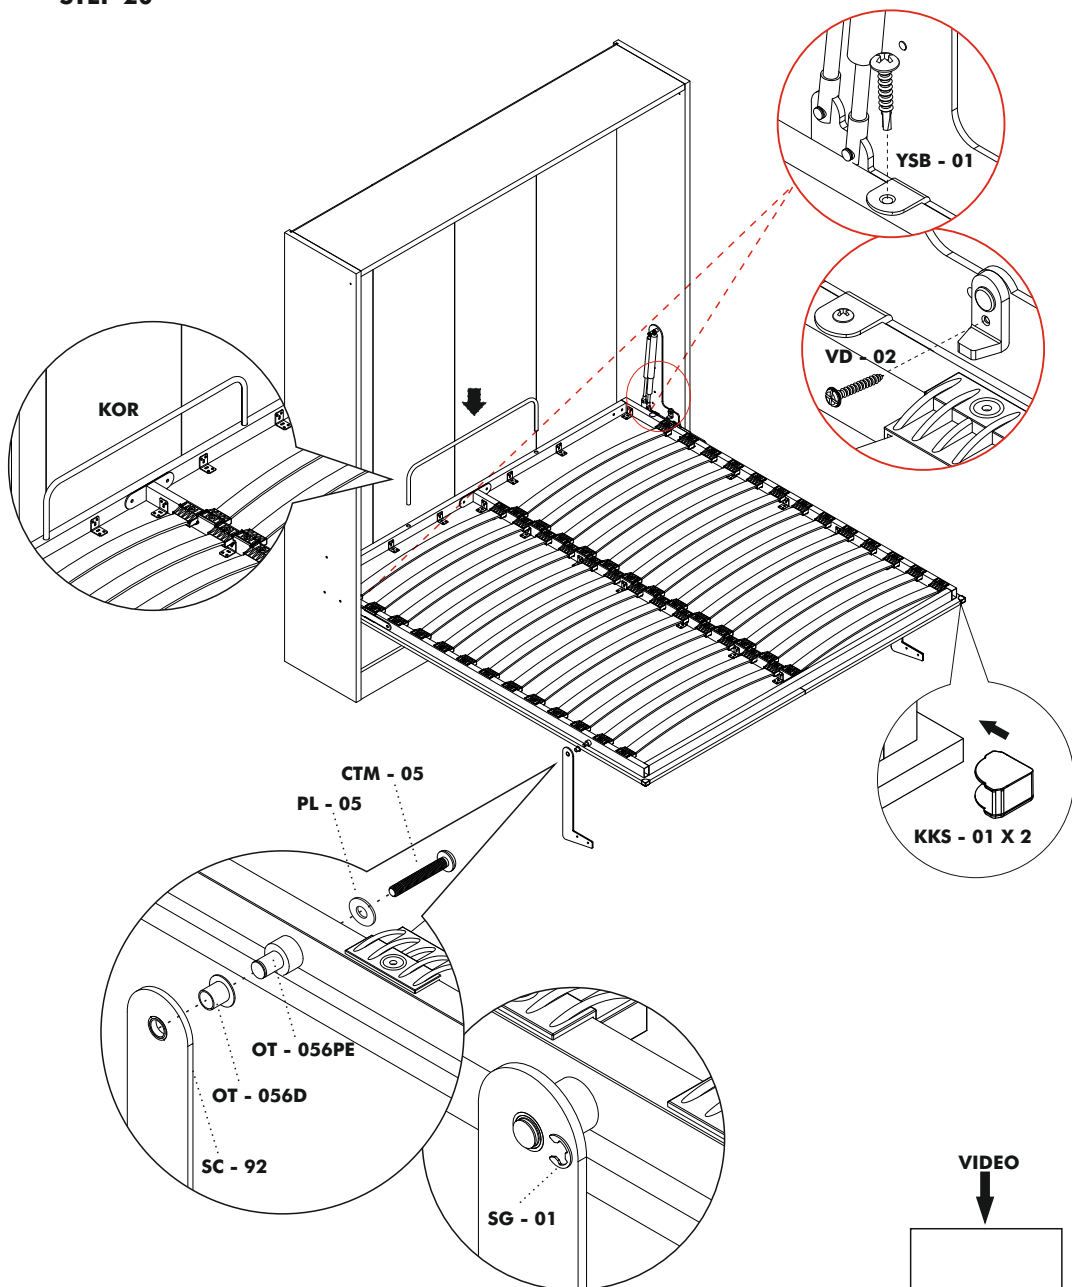


STEP 21

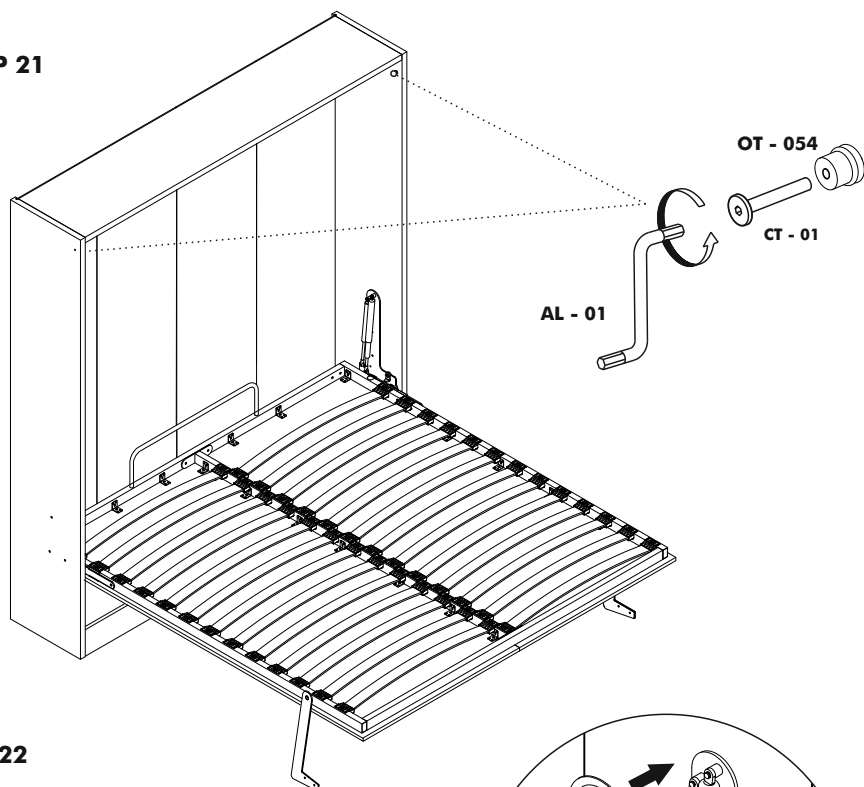

STEP 22

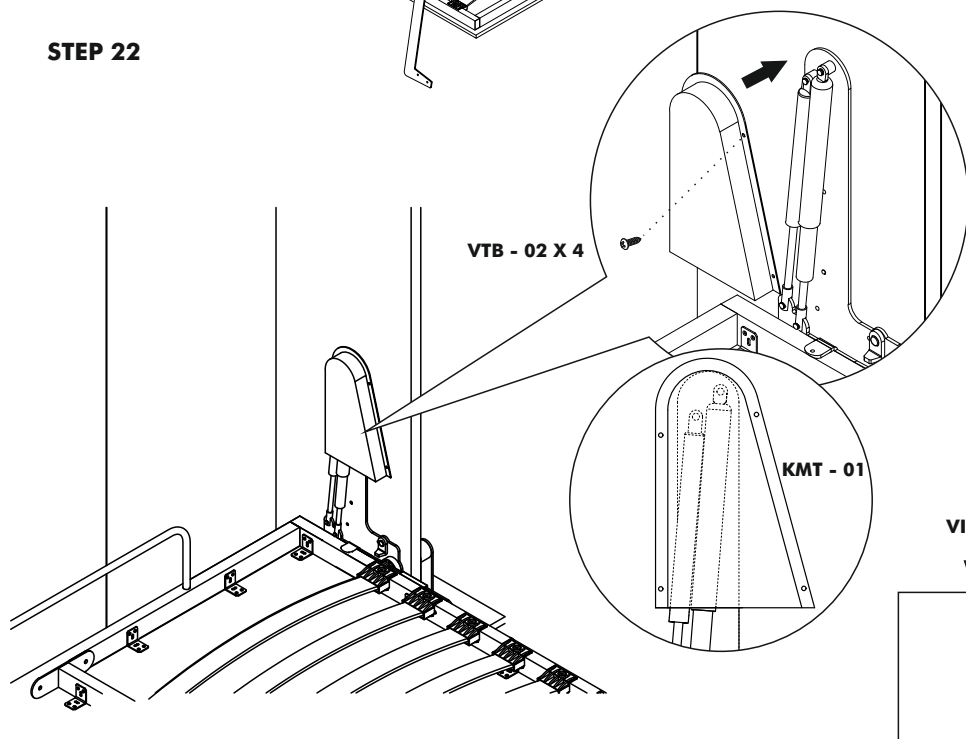


VIDEO

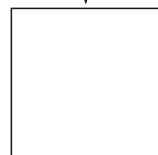


link

STEP 23

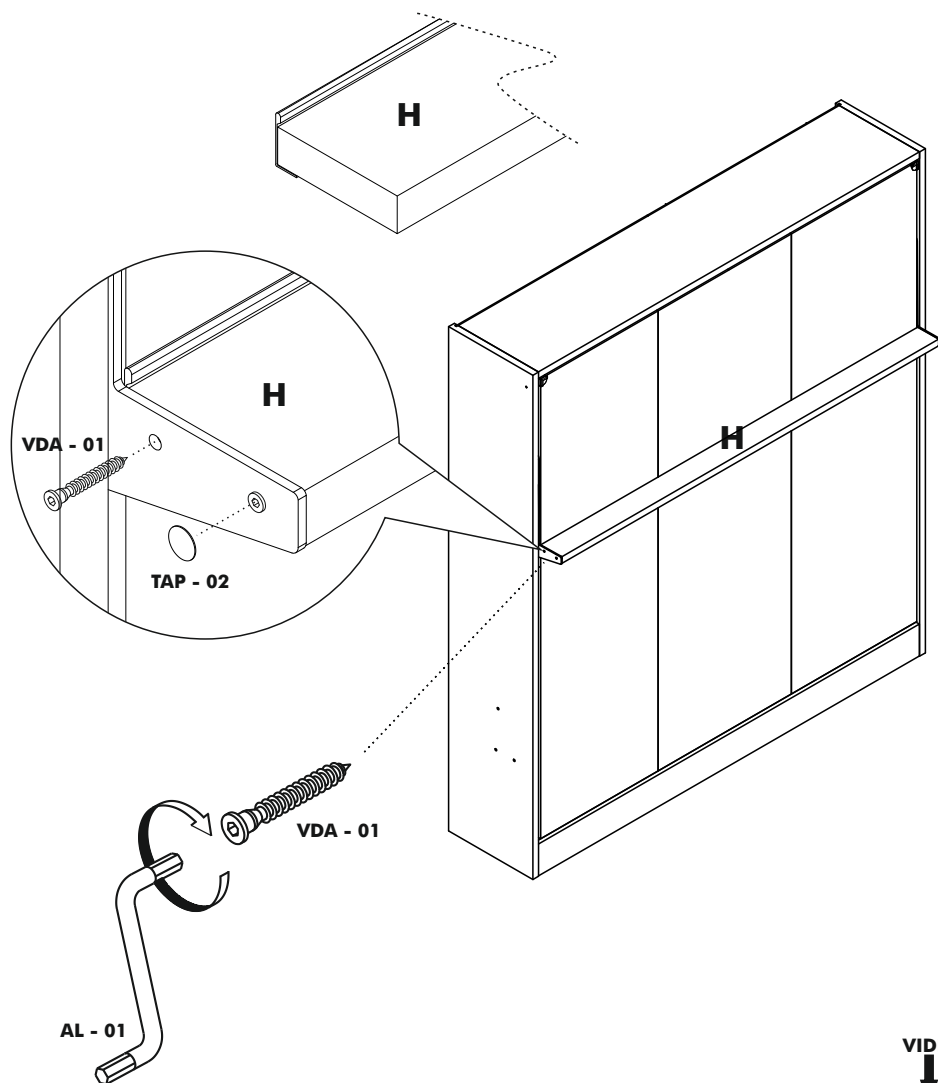


VIDEO




link

STEP 24

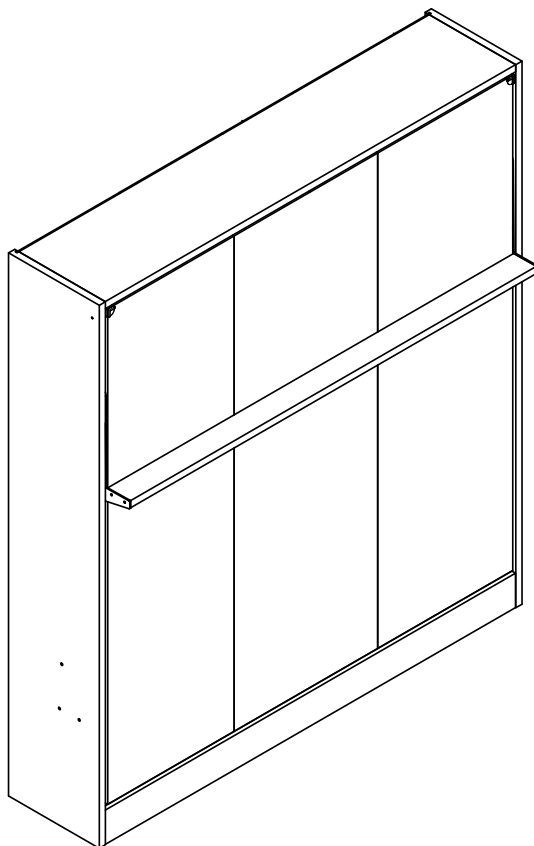

VIDEO

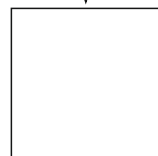

link

ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. When mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar strong material are also acceptable. Do not mount furniture to paper-mache or sheetrock (plasterboard) like material without properly fixing to stud.

2. For safety and product longevity you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm hardware remains properly affixed and connections snug.

3. Wall Bed mattress thickness may not exceed 8 inches (200mm). Take care to remove pillows and excess blankets before closing. Doing so keeps mechanism free of obstruction and unnecessary stress.

4. Do not lean or rest heavy objects on side or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.

5. Please use the furniture's beds, desks and shelving as intended. Not designed to be sat, stood, leaned, jumped (etc) on. Improper use may cause personal injury and damage to property.

6. With seasonal humidity change you must inspect interior and exterior of furniture.

7. Single bed models are suitable for the weight of one person. Sleeping by more than one person will cause damage of the product.

8. Before any un-mounting or disassembly please contact Multimo for technical support and instruction. Failure to properly detach risks injury to person and damage to property.

9. For Bunk Beds:

- a. Always use provided ladder when accessing top bunk.
- b. Be slow, careful and aware of surroundings when opening top bunk.
- c. Do not horseplay. Beds are to be slept on only.
- d. Some have legs that fully extend when open- be aware of where the leg is and will be.



www.multimo.com